


# ADP VOLSEM-RCA

for Volvo FH4B / FM4B / FMX4B trucks with SEM2 Module



The Volvo truck must be equipped with a **BBM (Body Builder Module)**, order code: **ECBB-HIG**

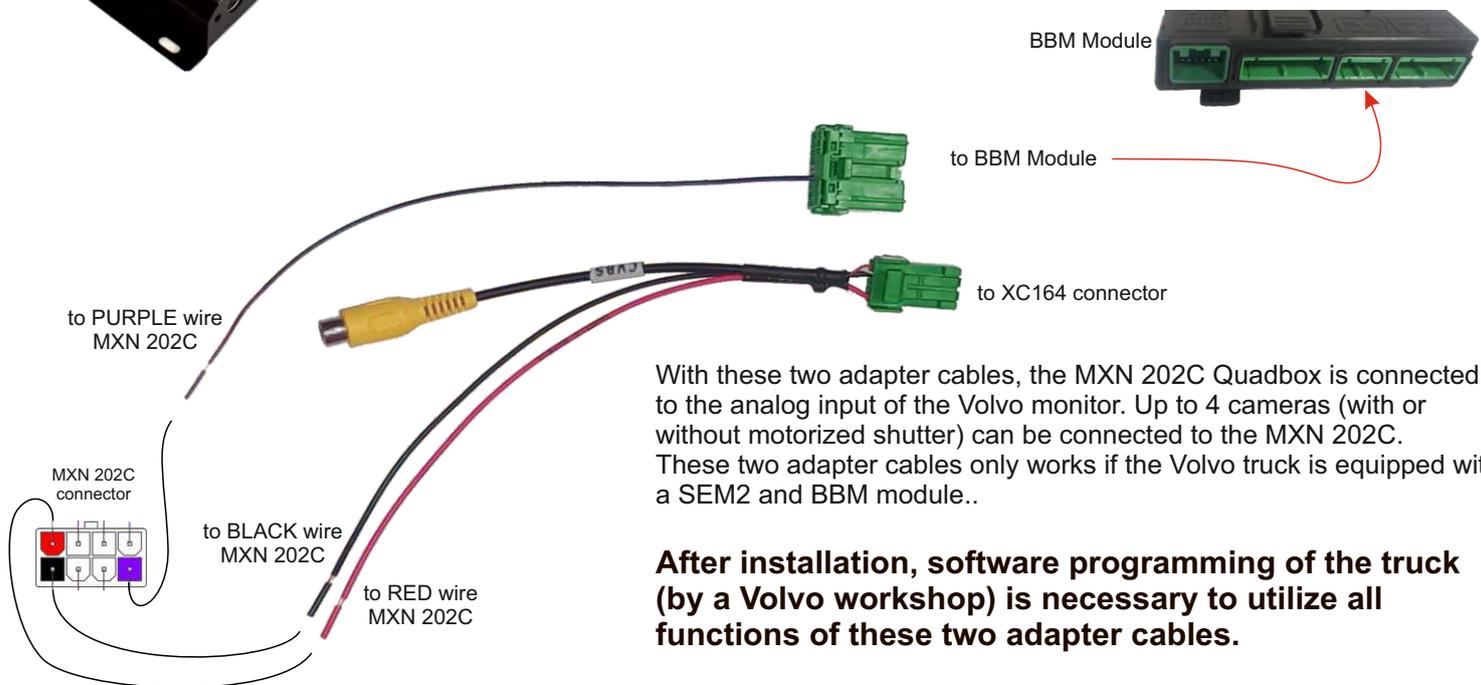


With these two adapter cables, the MXN 202C Quadbox is connected to the analog input of the Volvo monitor. Up to 4 cameras (with or without motorized shutter) can be connected to the MXN 202C. These two adapter cables only works if the Volvo truck is equipped with a SEM2 and BBM module..


**After installation, software programming of the truck (by a Volvo workshop) is necessary to utilize all functions of these two adapter cables.**

Location of the 5-pin green XC164 connector and BBM Module is under the fuse box in the center of the dashboard

XC164 connector

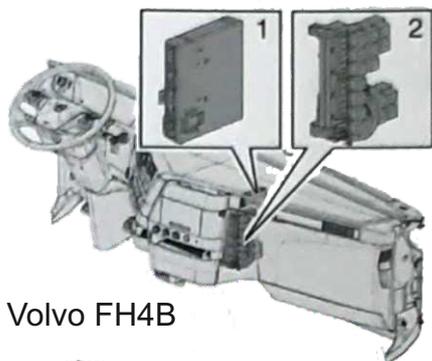

Volvo FH4B

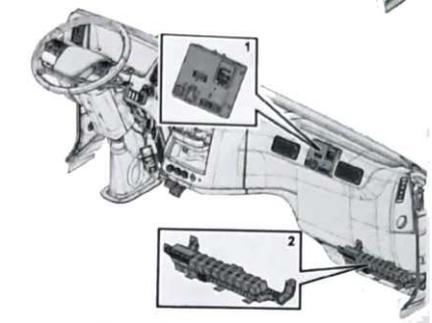

Volvo FM4B

1. Body Builder Module (BBM)
2. Fuse and relay box BBM

